

INSTALLATION & MAINTENANCE GUIDE

AMP[®] Lighting

AMP[®] Low Voltage Landscape Lighting
AMP[®] Estate Size Path & Area Lights
3601 Series

Help Hotline:

1-813-978-3900 • Mon-Fri 9am-6pm (EST)

www.amplighting.com



AMP® Estate Size Path & Area Lights 3601 Series



Important Safety Instructions: Read Before Installation

This luminaire is intended for installation in accordance with local codes and the National Electric Code (NEC). Failure to adhere to these codes and instructions may result in serious injury, property damage and void the warranty.

These instructions do not intend to cover all variations in installation, operation maintenance or mounting situations.

1. Make sure the power is turned OFF before installing or servicing this luminaire.
2. **WARNING:** risk of electrical shock. Install all luminaires 10 feet (3.05M) or more from pool, spa or fountain.
3. This luminaire is intended to be used only with a power supply (transformer) rated maximum of 300 watts (25 AMPS) at 15 volts.
4. Wiring connections must be made with UL listed wire connectors that are suitable for outdoor use.
5. Position the low voltage wire and wire connector so that it is located within 6 inches (15.2 cm) from a building structure, a luminaire or fitting.
6. The main low voltage cable is intended for shallow burial - less than 6 inches (152 mm).
7. If additional lengths of low voltage cable are required, please contact www.amplighting.com or call 1-813-978-3900.



Important Safety Instructions

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS

Lighted lamp is HOT!

WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS.

1. Turn off/unplug and allow to cool before replacing lamp.
2. Lamp gets HOT quickly! Contact only switch/plug when turning on.
3. Do not touch the hot lens, guard or enclosure.
4. Keep lamp away from materials that may burn.
5. Do not touch lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
6. Do not operate the luminaire fitting with a missing or damaged shield.

SAVE THESE INSTRUCTIONS


www.amplighting.com

Package Contents

A. (1) Fixture Body


Product Dimensions

*Estate Size Hat featured
on Estate Size Low
Voltage Stem*

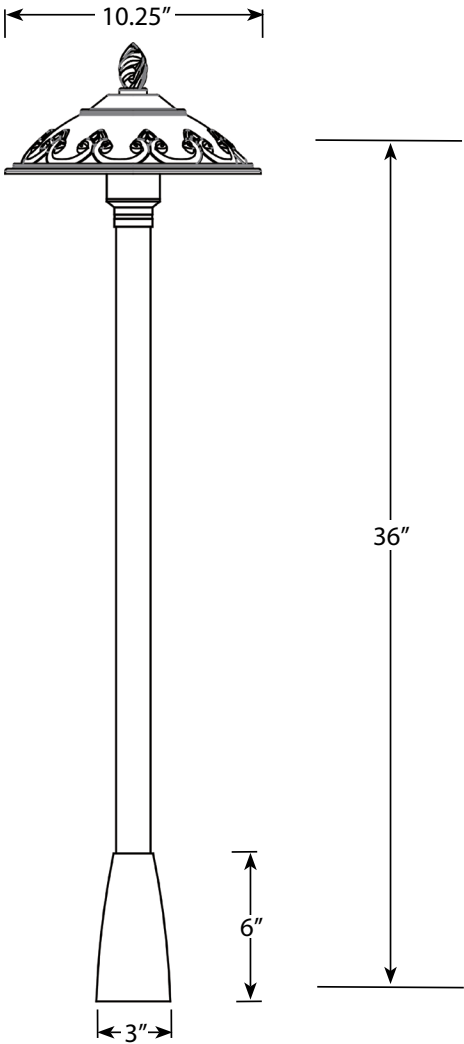


AMP® AMP® Estate Size Path & Area Lights 3601 Series

1 Remove Stem Top

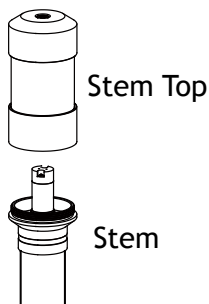

Loosen the stem top and remove it from the top end of the stem.


2 Install Lamp

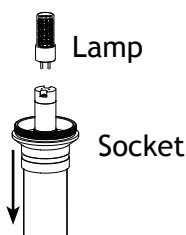

Insert the lamp with the correct wattage and type marked on the fixture label and push firmly into place.



CAUTION: Do not exceed maximum wattage marked on luminaire label.

3 Install Stem Top

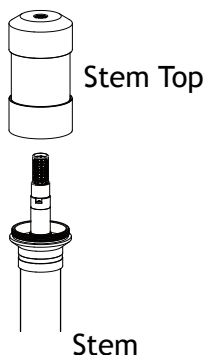


Thread the stem top onto the stem and hand tighten until snug.

4 Install Stake

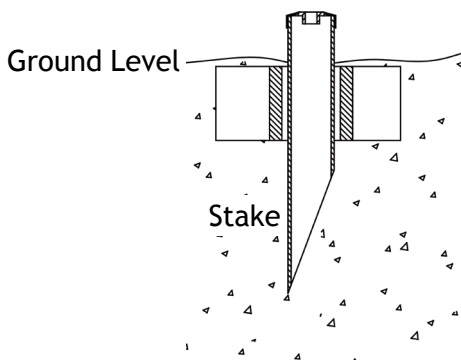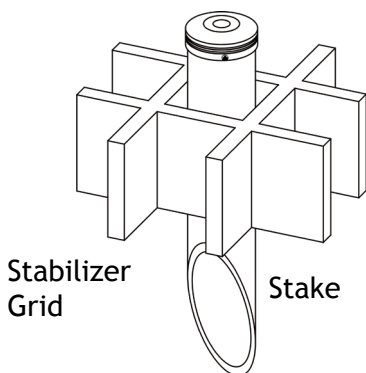


Dig a hole in the ground for the stake. Slide the stabilizer grid onto the stake and secure with the screws. Place the stake and backfill against the mounting stake.

5 Remove Cap from Stake

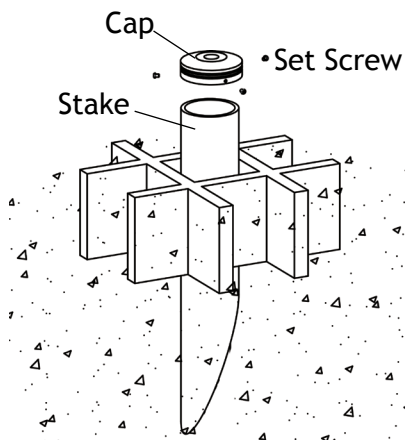

Remove the cap from the stake by loosening the set screws.


6 Install Cap to Base

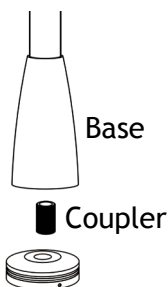

Screw the coupler on the bottom center of the base and then thread the cap onto the coupler.




7 Fixture Installation

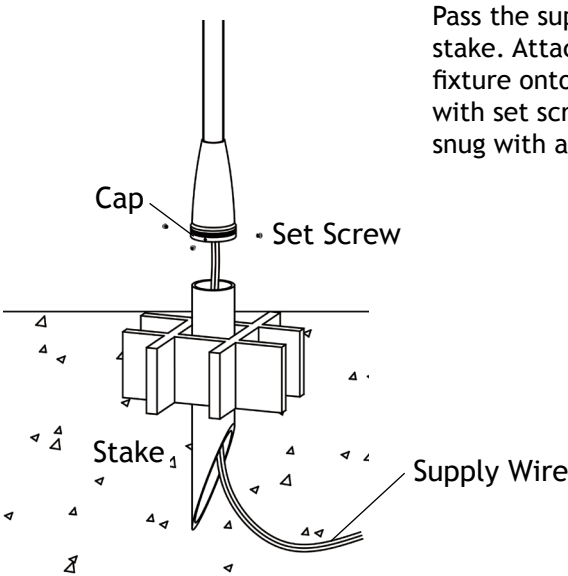


Pass the supply wires through the stake. Attach the cap with the fixture onto the stake and secure with set screws. Hand tighten until snug with a screwdriver.

8 Wire Connection

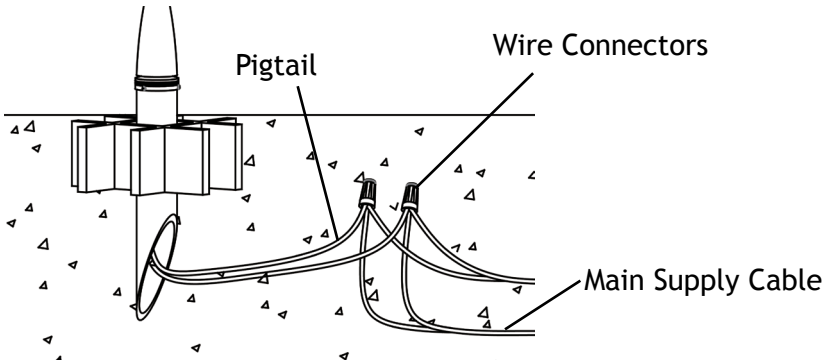

Strip both leads from the luminaire pigtail. Using two wire connectors (sold separately), connect the leads from the luminaire to the main supply cable leads.

9 Install Hat

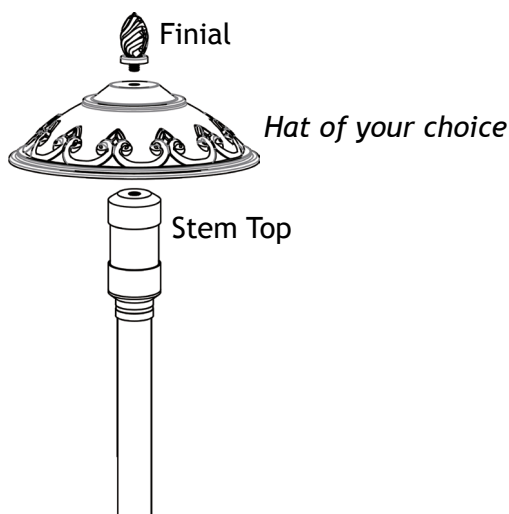

Place the hat of your choice onto the stem top and secure it with the finial, or thread the hat of your choice onto the stem top directly. Hand tighten until snug.

Install/Replace Lamp

Remove the finial, hat and stem top to expose the lamp and replace it with the correct wattage and type marked on the fixture label. Then, reinstall the stem top, hat and finial.

IMPORTANT: Lamps must be protected from moisture and dust at all times. Always reinstall the stem top and hat when removed.



Help Hotline:

1-813-978-3900 • Mon-Fri 9am-6pm (EST)

Specifications and product details subject to change without notice.
© Copyright 2019, AMP® Lighting, Lutz FL USA 33549 • All rights reserved.
customersupport@amplighting.com • 813.978.3900

www.amplighting.com

IS-ASM-3601-4-BBZ-ver1.pdf