

INSTALLATION INSTRUCTIONS



VOLT® Line Voltage Landscape Lighting
VOLT® Estate Size Path & Area Lights
3602 Series

Help Hotline:

1-813-978-3700 • Mon-Fri 8am-8pm • Sat-Sun 10am - 6pm (EST)

Specifications and product details subject to change without notice.
© Copyright 2019, VOLT® Lighting, Lutz FL USA 33549 • All rights reserved.
customersupport@voltlighting.com • 813.978.3700



Important: Please Read Before Installation

To avoid the risk of fire, explosion, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

To avoid electric shock:

1. Be certain electrical power is OFF before and during installation and maintenance.
2. Luminaire must be connected to a wiring system with an equipment-grounding conductor.

To avoid explosion:

1. Make sure the supply voltage is the same as the rated luminaire voltage.
2. Do not install where the marked operating temperatures exceed the ignition temperature of the hazardous atmosphere.
3. Do not operate in ambient temperatures above those indicated on the luminaire.

For supply connections use wire rated for at least 90°C (194°F)

Warning: these luminaire should ONLY be installed by a qualified electrician.

Important Safety Instructions

LIGHTED LAMP IS HOT!

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS.


1. Turn off/unplug and allow to cool before reducing lamp.
2. Lamp gets HOT quickly!
3. Do not touch the hot lens, guard or cowl.
4. Keep lamp away from materials that may burn.
5. Do not touch lamp at any time.
6. Use a soft cloth.
7. Oil from skin may damage lamp.
8. Do not operate the fixture with a damaged or missing lens or shield.

Package Contents

A. (1) Fixture Body


Product Dimensions

*Estate Size Hat featured
on Estate Size Line
Voltage Stem*

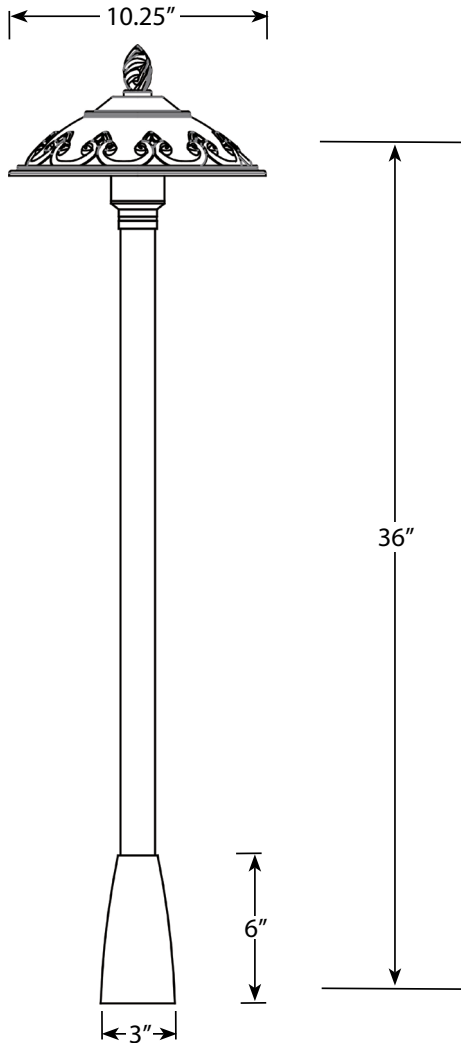




1 Remove Stem Top

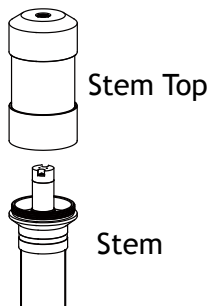

Loosen the stem top and remove it from the top end of the stem.


2 Install Lamp

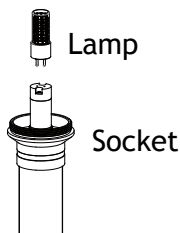

Insert the lamp with the correct wattage and type marked on the fixture label and push firmly into place.


CAUTION: Do not exceed maximum wattage marked on luminaire label.

 3



Thread the stem top onto the stem and hand tighten until snug.

4

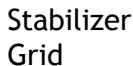


Conduit

Dig a hole in the ground for the conduit runs and the stake. Install the conduit. Slide the stabilizer grid onto the stake and secure with the screws. Place the stake over the conduit runs then backfill against the mounting stake.




5 Remove Cap from Stake

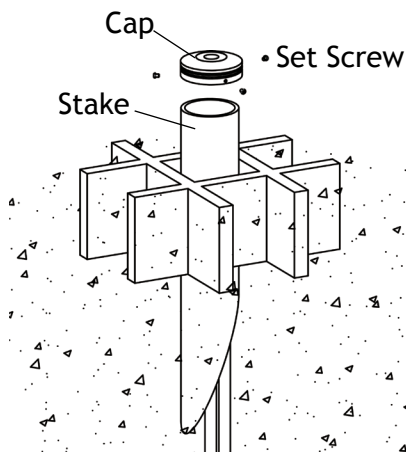

Remove the cap from the stake by loosening the set screws.


6 Install Cap to Junction Box

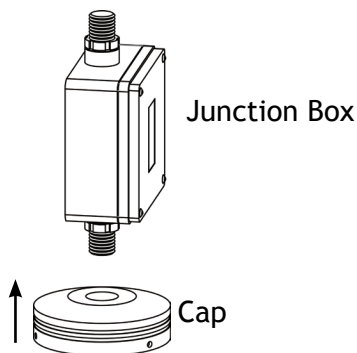

Thread the cap onto the Junction Box.

* Junction Box is not provided

7 Install Fixture to Junction Box

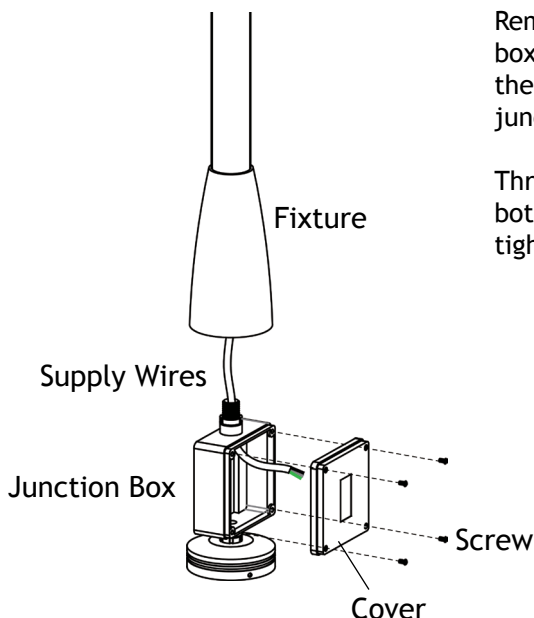


Remove the cover from the junction box by loosening the screws. Place the fixture supply wires into the junction box.

Thread the junction box onto the bottom of the fixture and hand tighten until snug.

* Junction Box is not provided®

8 Install Junction Box to Stake

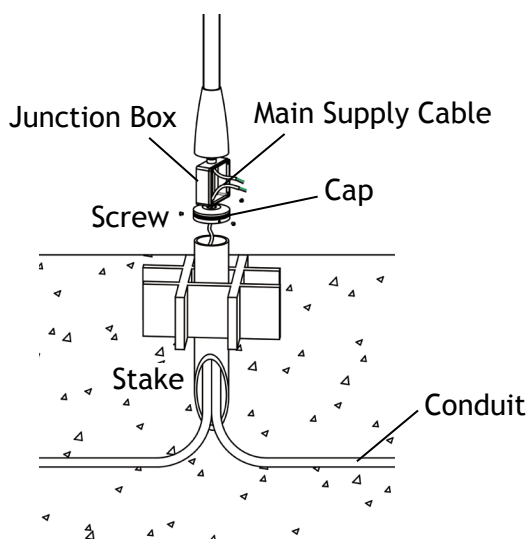


Pass the main supply cable into the junction box. Place the cap back onto the stake and secure with the previously removed screws. Tighten until snug with a screwdriver.

* Junction Box is not provided



9 Wire Connection

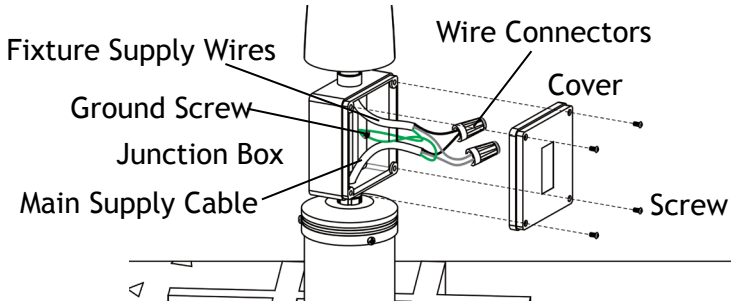


Strip the leads from the fixture supply wire and main supply cable. Using wire connectors (sold separately), connect the leads from the fixture supply wire to the main supply cable leads. Then, connect the ground wires to the ground screw in the junction box.

After wiring, carefully tuck the slack wires into the junction box. Attach the cover back onto the junction box and secure with the previously removed screws. Bury conduits and junction box.

* Junction Box is not provided

10 Install Hat

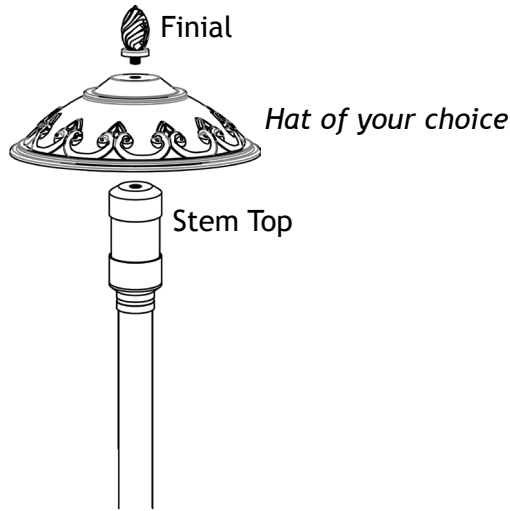

Place the hat onto the stem top and secure it with the finial, or thread the hat onto the stem top directly. Hand tighten until snug.

Install/Replace Lamp

Remove the finial, hat and stem top to expose the lamp and replace it with the correct wattage and type marked on the fixture label. Then, reinstall the stem top, hat and finial.

IMPORTANT: Lamps must be protected from moisture and dust at all times. Always reinstall the stem top and hat when removed.



VOLT® Estate Size Path & Area Lights
3602 Series



Help Hotline:

1-813-978-3700 • Mon-Fri 8am-8pm • Sat-Sun 10am - 6pm (EST)

www.voltlighting.com

Specifications and product details subject to change without notice.
© Copyright 2019, VOLT® Lighting, Lutz FL USA 33549 • All rights reserved.
custmersupport@voltlighting.com • 813.978.3700

is-3602series-ver9.pdf