

# INSTALLATION INSTRUCTIONS

 
## Landscape Lighting Accessory

Specifications and product details subject to change without notice.

# IR Remote

Two AAA batteries are required for the IR Remote (sold separately)


## 1 Remove the Battery Cover

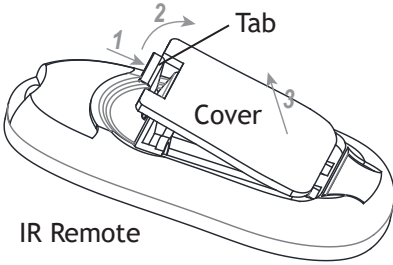

IR Remote

Press the tab and lift the battery cover to remove it from the IR Remote.


## 2 Install Two AAA Batteries

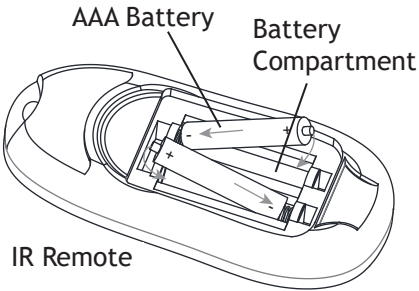 

IR Remote

Place two AAA batteries into the battery compartment properly.


## 3 Install the Battery Cover

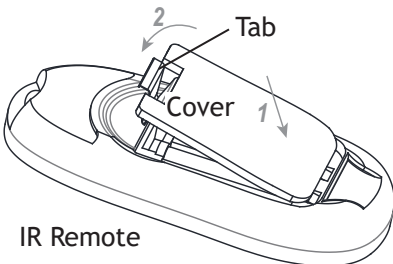 

IR Remote

Place the battery cover back onto the IR Remote.

## 4 IR Remote Functions

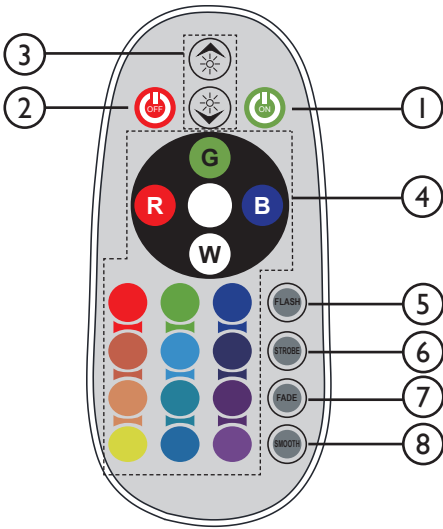 

1. On
2. Off
3. Brightness Control
4. 16 color selections
5. Flash
  - Mode 1: Repeats Red, Green, Blue + color cycle for 1 second duration of each of the seven colors within this mode.
  - Mode 2: Hit flash a second time and this mode slowly blends the same seven colors from mode one, mixing them together.

### 6. Strobe

- Mode 1: Pick any color on the remote, then press strobe and that color will strobe every second alternating between on and off.
- Mode 2: Hit strobe a second time and this mode will strobe a blended white color at the same speed as before.

### 7. Fade

- Mode 1: Pick any color on the remote, then press fade and that color will slowly fade in and out every second.
- Mode 2: Hit fade a second time and it will fade a blended white color in and out at the same speed as before.

### 8. Smooth

- Mode 1: Repeats a flash cycle of Red, Green, and Blue only.
- Mode 2: Hit smooth a second time and this mode slowly blends Red, Green, and Blue only; in and out of each other at the same speed.

# INSTALLATION INSTRUCTIONS

## Landscape Lighting Accessory

Specifications and product details subject to change without notice.