











## 4 DIG HOLE

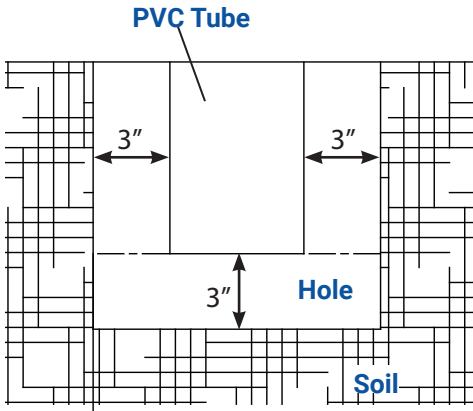


Prepare a hole in the ground. Make sure there are approximately 3" spaces surrounding the PVC tube for pea gravel or sand.

## 5 WIRE CONNECTION

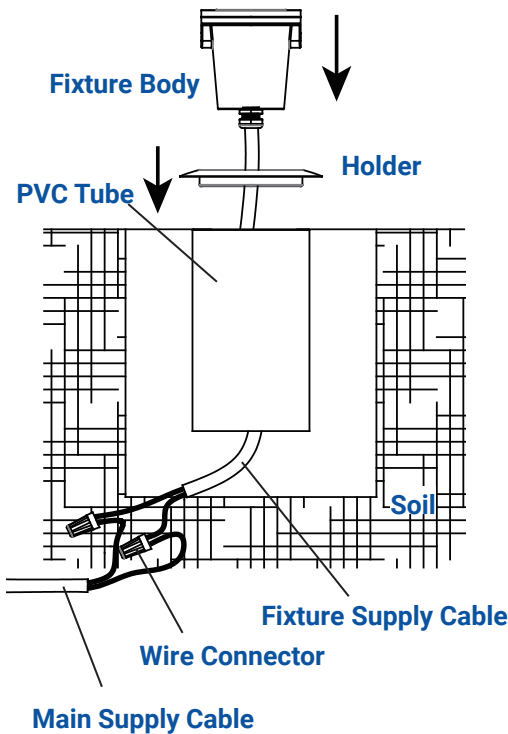

Pass the fixture supply cable through the holder and the PVC tube. Place the holder onto the PVC tube, then place the fixture body into the holder properly.

Strip both leads from the fixture supply cable and the main supply cable. Using two wire connectors (sold separately), connect the leads from the fixture supply cable to the main supply cable.

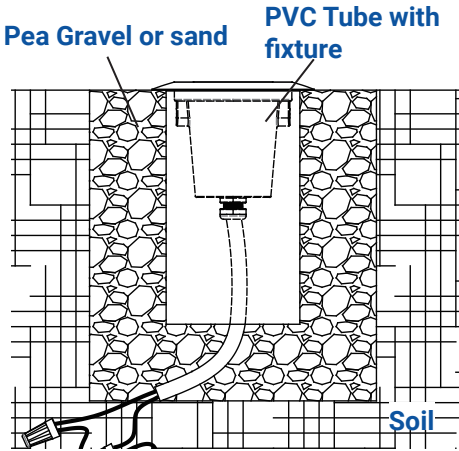**6 FILL HOLE**

Install the PVC tube with the fixture in the hole and fill the hole with pea gravel or sand.


**INSTALL/ REPLACE LAMP**

Repeat step 1 - step 3 to remove the faceplate to expose the lamp and replace it with the correct wattage and type marked on the fixture label. Then, reinstall the faceplate.

**IMPORTANT:** Lamps must be protected from moisture and dust at all times. Always reinstall the faceplate when removed.


# Install/Replace Faceplate

## 7 REMOVE FACEPLATE

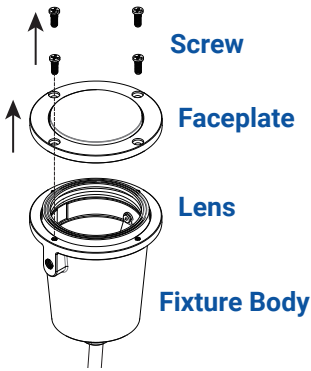


Use a screwdriver to loosen the screws on the faceplate and remove the lens from the fixture body.

## 8 REPLACE FACEPLATE

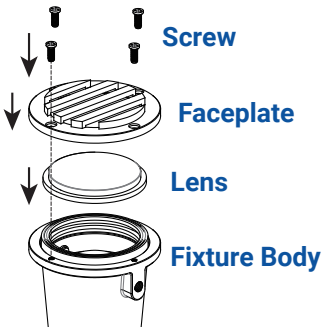

Place the lens and faceplate onto the fixture body and secure with previously removed screws in a star pattern. Hand tighten until snug with a screwdriver.

### Faceplate Replacement Options

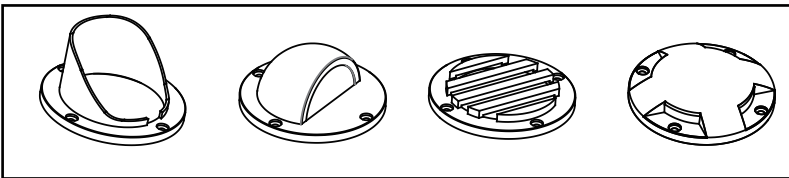



1-813-978-3700 • Mon-Fri 8am-8pm • Sat-Sun 10am - 6pm (EST)

Specifications and product details subject to change without notice.  
© Copyright 2023, VOLT® Lighting, Lutz FL USA 33549 • All rights reserved.  
[customersupport@voltlighting.com](mailto:customersupport@voltlighting.com) • [www.voltlighting.com](http://www.voltlighting.com)