INSTALLATION & MAINTENANCE GUIDE

AMP® Lighting

AMP® Low Voltage Landscape Lighting

AMP® AerialistPro Hanging Light

ASI-9000-4036-B-BZ

AMP®
AMP® AerialistPro Hanging Light
ASI-9000-4036-B-BZ

⚠ Important Safety Instructions: Read Before Installation

This luminaire is intended for installation in accordance with local codes and the National Electric Code (NEC). Failure to adhere to these codes and instructions may result in serious injury, property damage and void the warranty.

These instructions do not intend to cover all variations in installation, operation maintenance or mounting situations.

1. Make sure the power is turned OFF before installing or servicing this luminaire.
2. WARNING: risk of electrical shock. Install all luminaires 10 feet (3.05M) or more from pool, spa or fountain.
3. This luminaire is intended to be used only with a power supply (transformer) rated maximum of 300 watts (25 AMPS) at 15 volts.
4. Wiring connections must be made with UL listed wire connectors that are suitable for outdoor use.
5. Position the low voltage wire and wire connector so that it is located within 6 inches (15.2 cm) from a building structure, a luminaire or fitting.
6. The main low voltage cable is intended for shallow burial - less than 6 inches (152 mm).
7. If additional lengths of low voltage cable are required, please contact www.amplighting.com or call 1-813-978-3900.

⚠ Important Safety Instructions

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS
Lighted lamp is HOT!

WARNING – To reduce the risk of FIRE OR INJURY TO PERSONS.

1. Turn off/unplug and allow to cool before replacing lamp.
2. Lamp gets HOT quickly! Contact only switch/plug when turning on.
3. Do not touch the hot lens, guard or enclosure.
4. Keep lamp away from materials that may burn.
5. Do not touch lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
6. Do not operate the luminaire fitting with a missing or damaged shield.
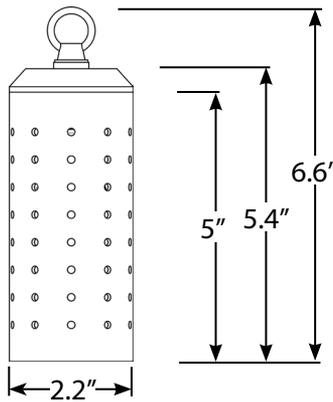
SAVE THESE INSTRUCTIONS

www.amplighting.com

Package Contents

A. (1) Fixture Body
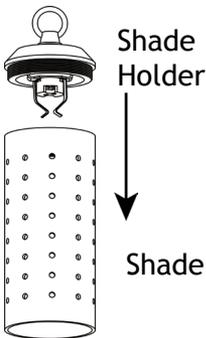B. (1) Fixture Chain

C. (1) Quick Link
D. (1) Mounting Bracket

Parts Required (sold separately)

A. (3) Self-tapping Screws
B. (3) Wall Anchors
C. (3) Flat Washers

D. (1) LED MR16 Lamp
E. (1) Low Voltage Transformer
F. (1) Exterior Grade Caulk

Product Dimensions

6.6"

5" 5.4"

2.2"

1 Install Extension Riser on Fixture

Shade Holder

Shade

Unscrew the shade and remove it from the shade holder to expose the socket.

AMP® AerialistPro Hanging Light
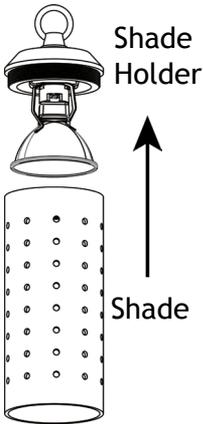## ASI-9000-4036-B-BZ

2 | Install Lamp

Insert the lamp with the correct wattage and type marked on the fixture label. These fixtures use LED MR16s (pictured) and LED GU4 Bi-pins (not pictured).

CAUTION: This fixture is for LED use only. Do not exceed maximum wattage marked on luminaire label.

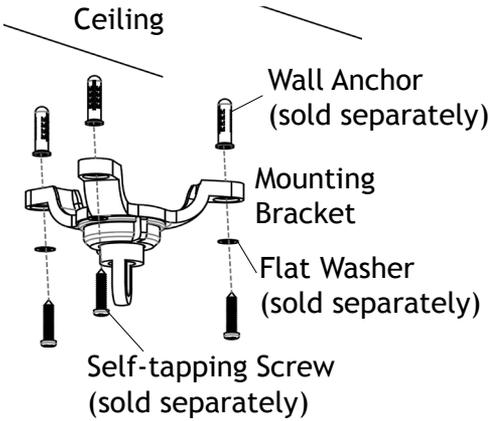NOTE: DO NOT touch lamp with bare hands. Use soft cloth to handle lamp.

Socket

Lamp

3 | Install Stake

Thread the shade back onto the shade holder and hand tighten until snug.

Shade Holder

Shade

4 Install Fixture Body to Stake

Ceiling

Wall Anchor
(sold separately)

Mounting
Bracket

Flat Washer
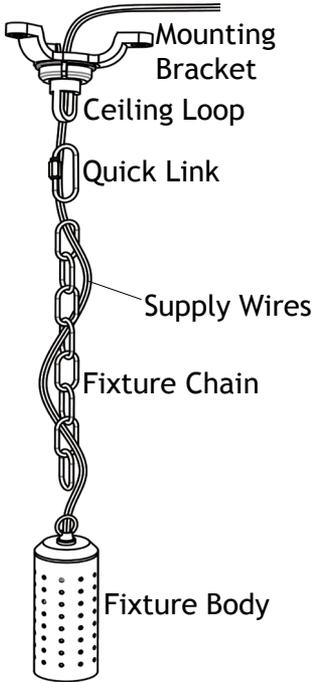(sold separately)

Self-tapping Screw
(sold separately)

Attach the mounting bracket onto the desired ceiling surface. Secure with the flat washers and self-tapping screws.

Note: Wall anchors are required for certain installation conditions (concrete or brick walls). Mark on the desired ceiling surface for wall anchors by using the holes on the mounting bracket. Remove the mounting bracket and drill proper holes on the desired ceiling surface and then insert the wall anchors.

AMP® AerialistPro Hanging Light
ASI-9000-4036-B-BZ

5 Attach Fixture to Mounting Bracket

Adjust the fixture chain to the desired length by removing the links if needed. (Note: Pliers are required for this step).
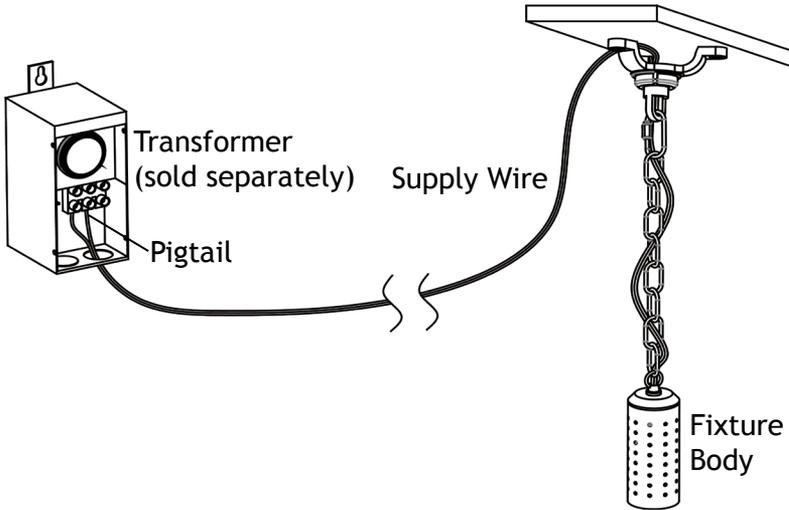
With the fixture chain unattached to the fixture loop on the top of the fixture body; or the ceiling loop on the underside of the mounting bracket, pull the supply wires through the fixture chain alternating between the links.

After the wires are through the fixture chain, pull the supply wires up and around the backside of the mounting bracket.

Attach one end of the fixture chain to the fixture loop at the top of the fixture body. Lift the fixture body and fixture chain up and attach the other end of the fixture chain onto the ceiling loop on the bottom of the mounting bracket with the quick link.
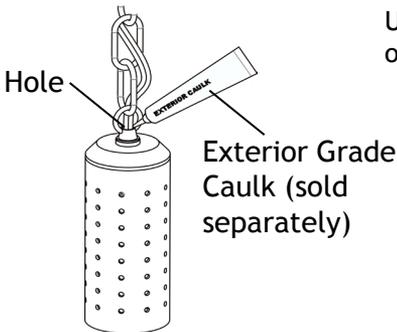
The fixture will now hang safely. Close the chain loop at the ceiling loop.

Mounting Bracket
Ceiling Loop
Quick Link
Supply Wires
Fixture Chain
Fixture Body

6 Wire Connections

Transformer
(sold separately)

Supply Wire

Pigtail

Fixture
Body

Lay out the supply cable to the transformer. Strip both leads from the luminaire pigtail. Connect the leads from the luminaire supply cable to the transformer (sold separately).

7 Apply Caulk to the Hole on Fixture Loop

Using the exterior grade caulk, caulk over the hole on the fixture loop.

Hole

EXTERIOR CAULK

Exterior Grade
Caulk (sold
separately)

AMP® Lighting

www.amplighting.com

IS-ASI-9000-4036-B-BZ-ver1.pdf