

Installation Instructions

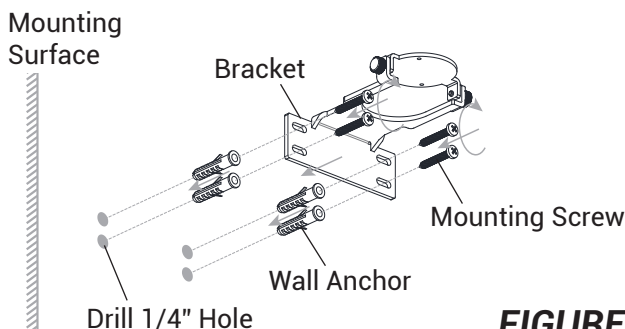


FIGURE A

- A. Note: Wall Anchors are required for concrete surface. Attach the bracket to the concrete surface and mark (4) points on the mounting surface from slot holes on the bracket. Drill (4) 1/4" holes from marks and insert wall anchors into the holes completely.

Attach the bracket to the mounting surface and secure with (4) mounting screws. Hand tighten until snug with screwdrivers.

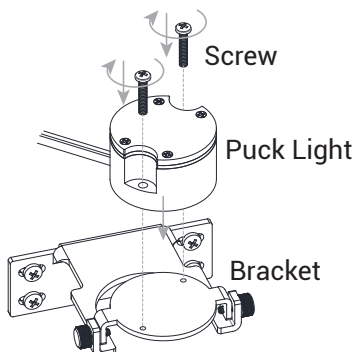


FIGURE B

- B. Place the puck light onto the bracket and secure with (2) screws.

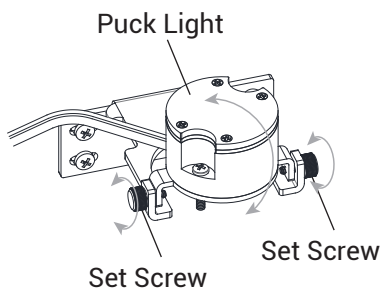


FIGURE C

- C. Unlock (2) set screws on the sides of the bracket and rotate the puck light to desired directions. Always tighten (2) set screws after adjustment.