
INSTALLATION INSTRUCTIONS



VOLT<sup>®</sup> 6" Rotatable Undercover Hardscape VAC-HS-GGLR8-BBZ

## **Glare Guard Installation**

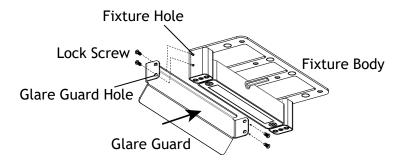

Attach the glare guard onto the fixture body by aligning the holes of the glare guard to the holes on the side of the fixture body and secure them with the lock screws. Tighten with a screw driver.