




1 Assemble Trenching Spade

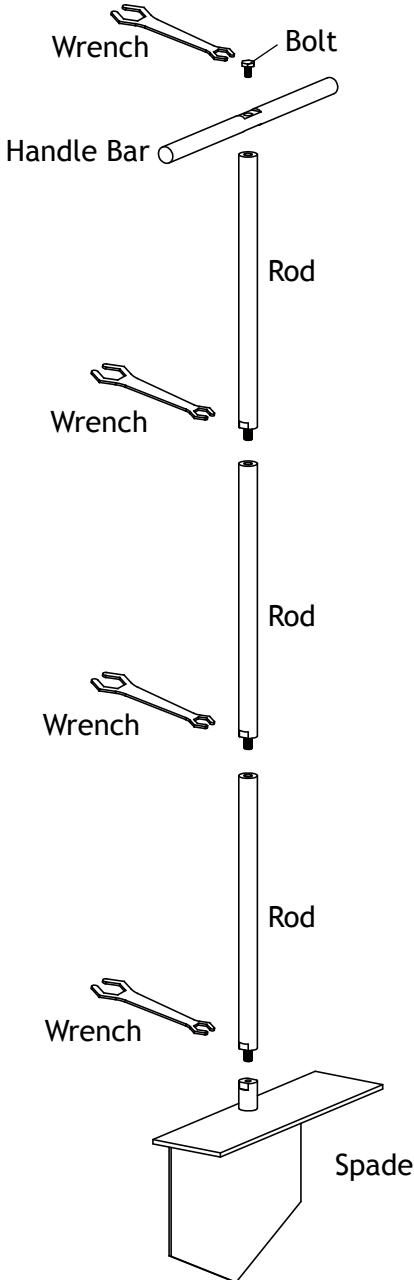

1. Thread all three rods together as pictured. The rods will face with the male ends downward, and the spade will tighten at the very bottom. Tighten each area where indicated with a wrench, so that the tool is firmly secured together in one piece. Place the handle bar on the top of the Upper Rod. Thread the Bolt onto the uppermost Rod and hand tighten until snug; then use a wrench to secure it firmly in place as well.
2. Find your desired area for laying the cables. Dig trenches by using the trenching spade. Lay the cables down into the trenches and cover them by stamping the ground back into place.